# INSTALLATION TYPES

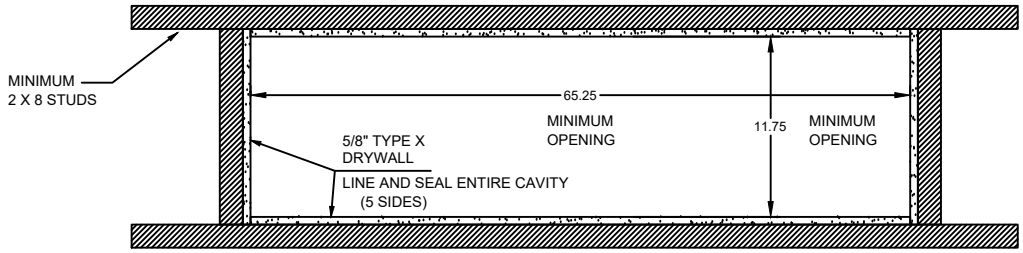


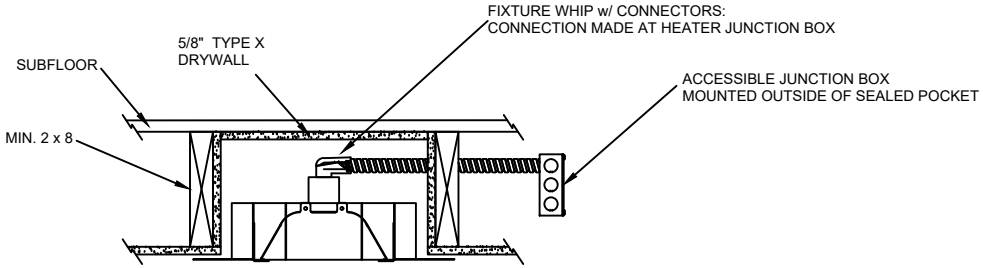


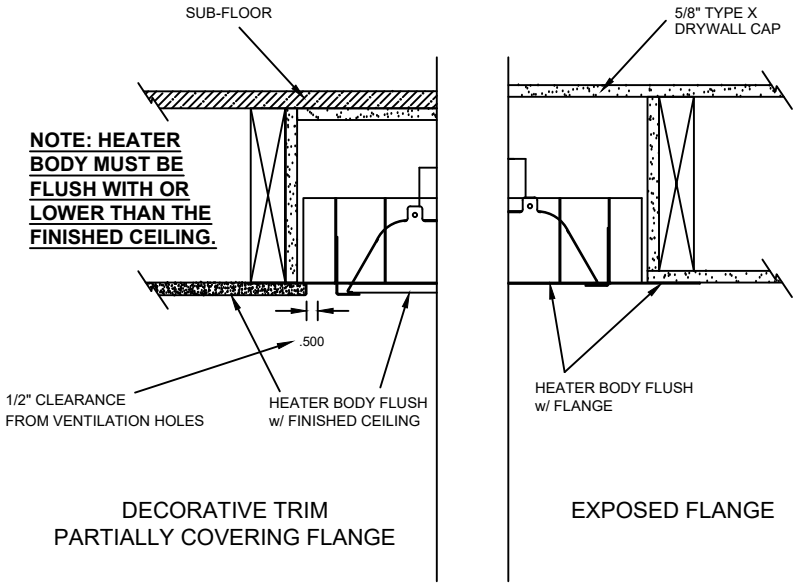


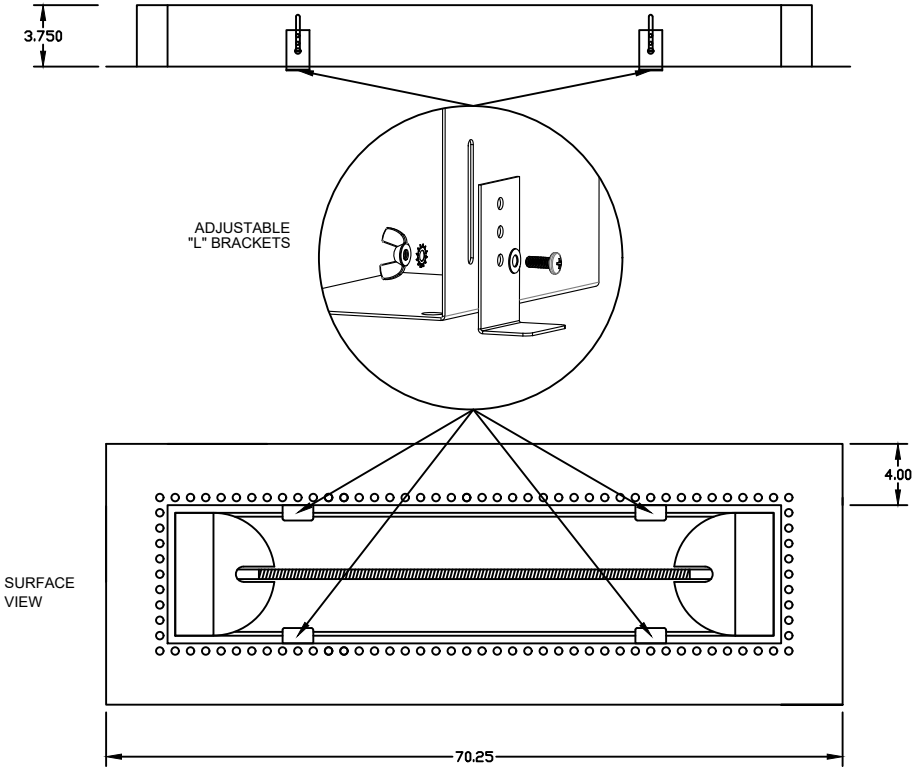


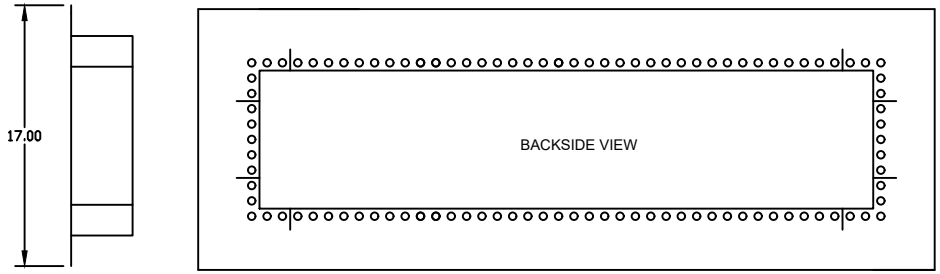


**WARNINGS:**

- **Do not use Surface Mount Brackets.**
- **This Frame is ONLY to be used on a flat non-sloped ceiling.**
- **Heater Body must face straight down and be flush with the finished ceiling.**
- **Frame and Heater cannot be installed on a pitched angle.**
- **Accessible Junction Box must be installed outside of sealed drywall pocket.**
- **Must use $\frac{5}{8}$" type "X" drywall.**
- **Must use supplied 4 foot Hi-Temp Fixture Whip and Hi-Temp Ceramic Wire Nuts.**
- **Please contact factory for longer length Hi-Temp Fixture Whips available for purchase.**
- **Discard Surface Mounting Brackets provided with Heater and use "L" Brackets.**
- **Use Licensed Electrician ONLY.**

***After 4 hours of continuous use, a 15 minute cool down period is recommended for maximum heater longevity. See controls brochure for timer options.***

**NOTES:**

- Heater suspends (Gravity) by resting on adjustable "L" Brackets in flush mount fixture.
- Mounting holes on Surface Flange to be determined and drilled by Contractor/Installer.
- Coil excess flex into heater cavity.


INFRATECH™
www.infratech-usa.com
15700 S. Figueroa St.
Gardena, California 90248
Phone: (310) 354-1250
Fax: (310) 523-3674


| ITEM #: | MATERIAL: |
|---|---|
| 18-2305 | 304 S.S. #4 FINISH |

DESCRIPTION: W-61 FLUSH MOUNT FRAME (FOR USE WITH 61¼" HEATERS)

NOTES: SUPPLIED w/ HI-TEMP FIXTURE WHIP

| DATE: | SCALE: | DRAWN BY: |
|---|---|---|
| Dec. 16, 2019 | N/A | CL |